


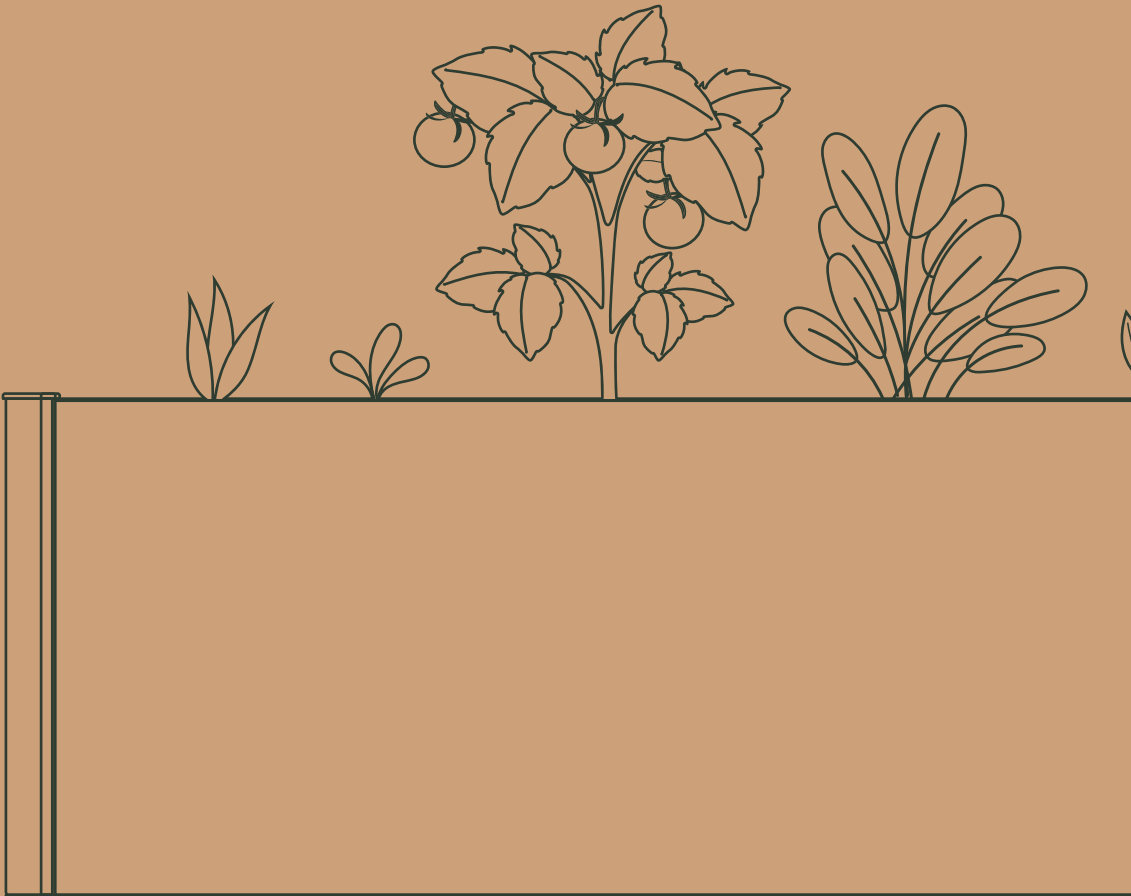

General Manual for 17" Tall Modern Metal Raised Garden Bed



Gardening Made Easier. Anytime, Anywhere.

Copyright © 2026 Vego





Parts List

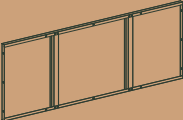Configuration		2.0' × 4.0'	2.0' × 8.0'	3.0' × 6.0'	4.0' × 4.0'	4.0' × 8.0'
Parts						
P1 Metal Panel		2	2			
P2 Metal Panel				6		
P3 Metal Panel		2	4		4	6
L1 Bracing Frame						3
L2 Bracing Frame				2		
L3 Bracing Frame			1			
C1 Corner Post		4	4	4	4	4
C2 Center Post			2	2		2
S1 Cap		4	4	4	4	4
S2 Cap			2	2		2

Visit vegogarden.com for more info.






Parts List

Configuration		2.0' × 4.0'	2.0' × 8.0'	3.0' × 6.0'	4.0' × 4.0'	4.0' × 8.0'
Parts						
F1 Bolts M6 × 12		24	36	36	24	36
F2 Bolts M6 × 25			4	4		4
F3 Bolts M6 × 35				2		4
F4 Nuts				2		4
Aluminum Logo		1	1	1	1	1
Gloves		1	1	1	1	1
T1 L-Shaped Ball-End Hex Key		1	1	1	1	1
T2 L-Shaped Socket Wrench				1		1
T3 Power Hex Driver Bit		1	1	1	1	1







Configurations

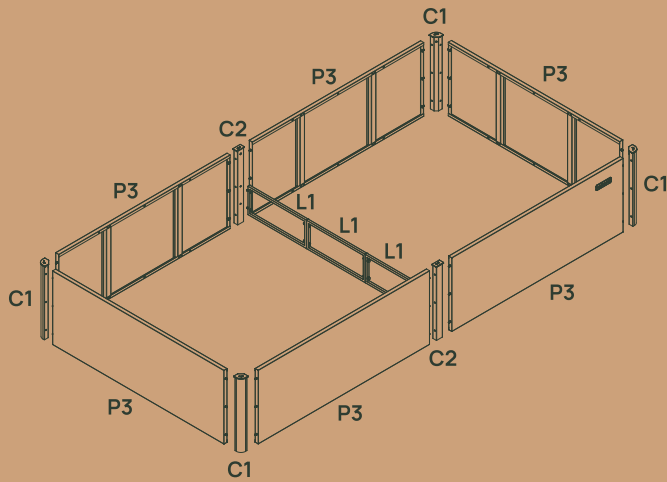


17" Tall Modern 4' x 8' Metal
Raised Garden Bed

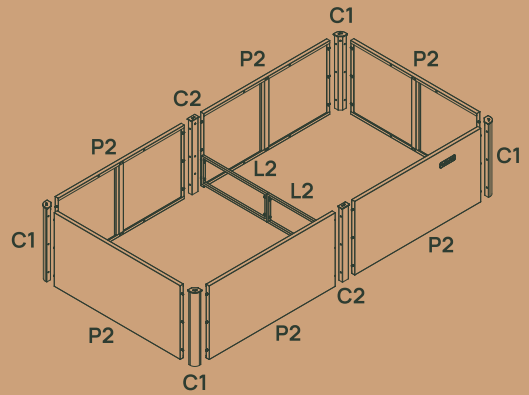


17" Tall Modern 3' x 6' Metal
Raised Garden Bed

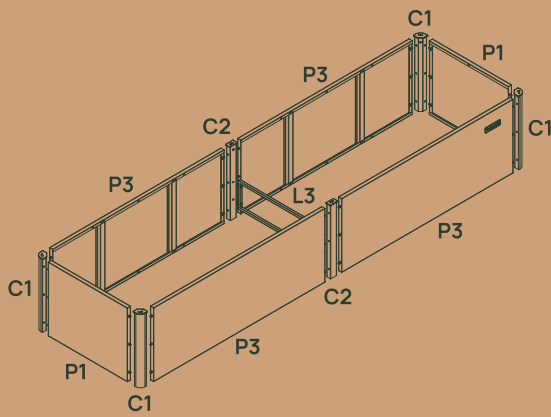

17" Tall Modern 2' x 8' Metal
Raised Garden Bed

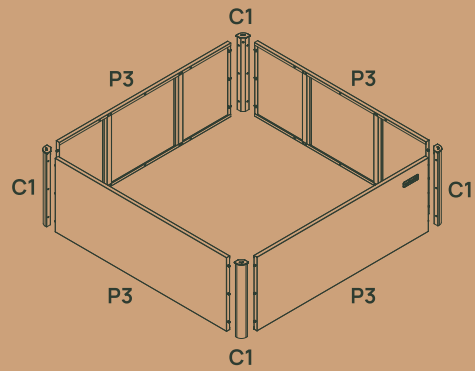

17" Tall Modern 4' x 4' Metal
Raised Garden Bed

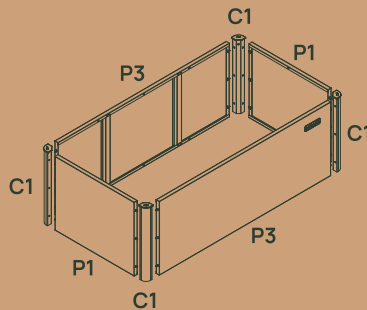

17" Tall Modern 2' x 4' Metal
Raised Garden Bed



Safety Precautions

This product may contain sharp metal corners and edges. To prevent injury:


- Handle with care at all times
- Wear gloves, closed-toe shoes & long pants when handling
- Work on a stable, clean surface away from children and pets
- Follow all instructions carefully and use tools only as directed

If you are unsure about any step, pause and seek assistance.



Tips

Use the included T3 Power Hex Driver Bit with a power tool for faster assembly.

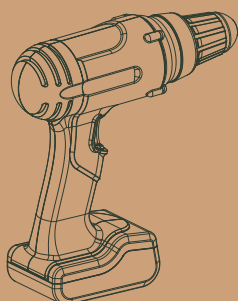

+






Assembly Guide

1

Insert each post cap into the top of its corresponding post.

For the 2' × 4' and 4' × 4' models, install four S1 Corner Post Caps on the four C1 Corner Posts.

For the 2' × 8', 3' × 6', and 4' × 8' models, install four S1 Corner Post Caps on the four C1 Corner Posts, and two S2 Center Post Caps on the two C2 Center Posts.

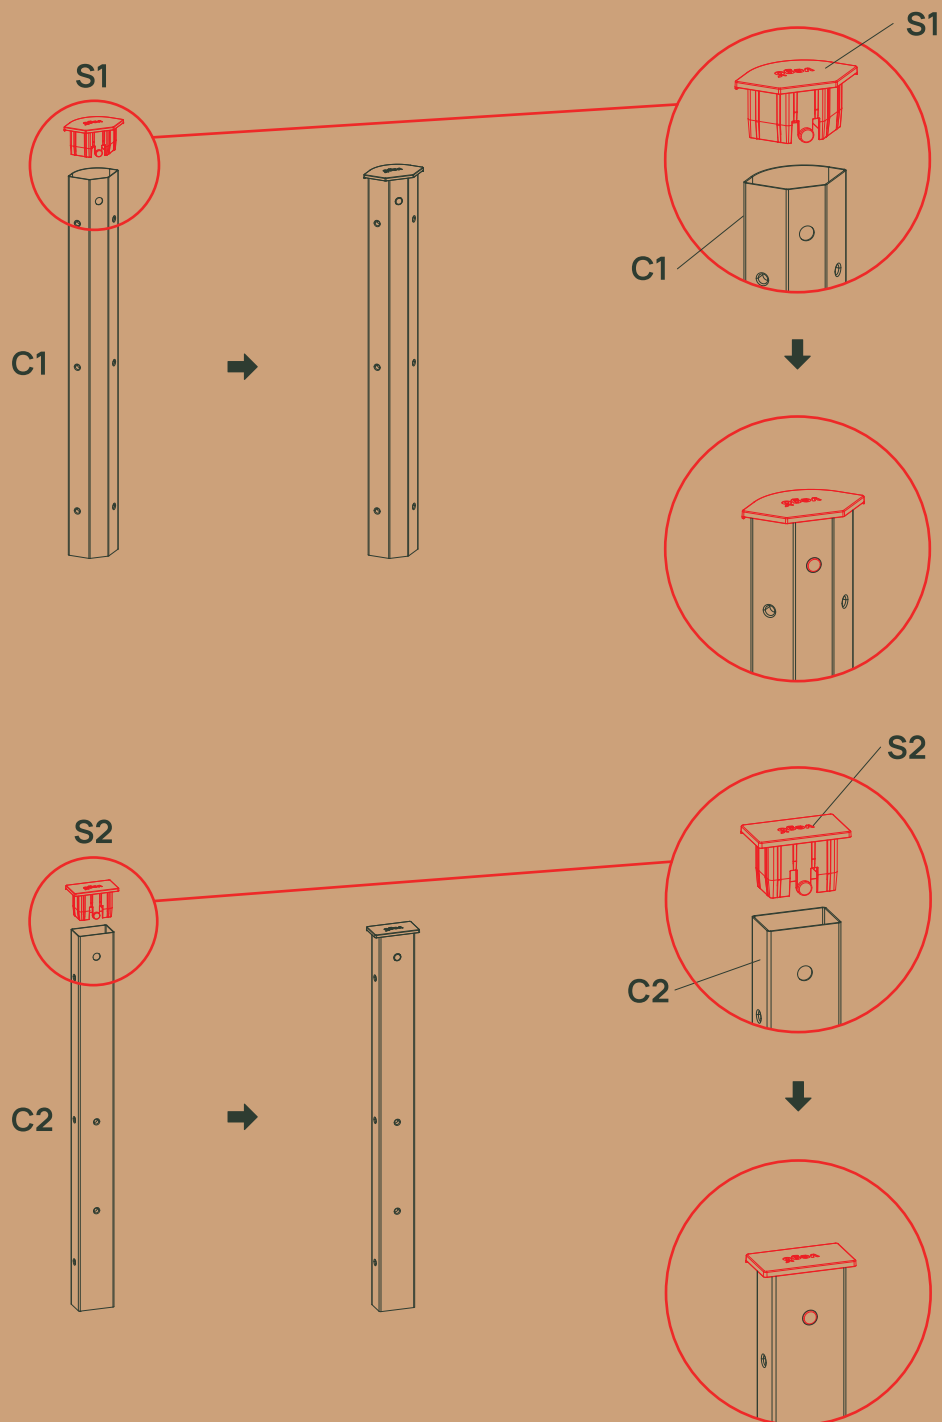

For 2' x 8', 3' x 6', and 4' x 8' Models



These models include C2 Center Posts. Follow the steps below for assembly.

2 Assemble One Long Side

Using F1 Bolts, assemble the C1 Corner Posts, C2 Center Posts, and metal panels as shown in the diagram.

Use P3 Metal Panels for the 2' x 8' and 4' x 8' models. Use P2 Metal Panels for the 3' x 6' model.

Note: Make sure the capped ends of all C1 and C2 Posts face the same direction.

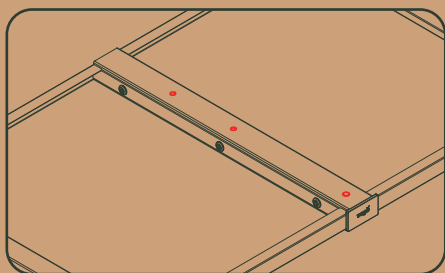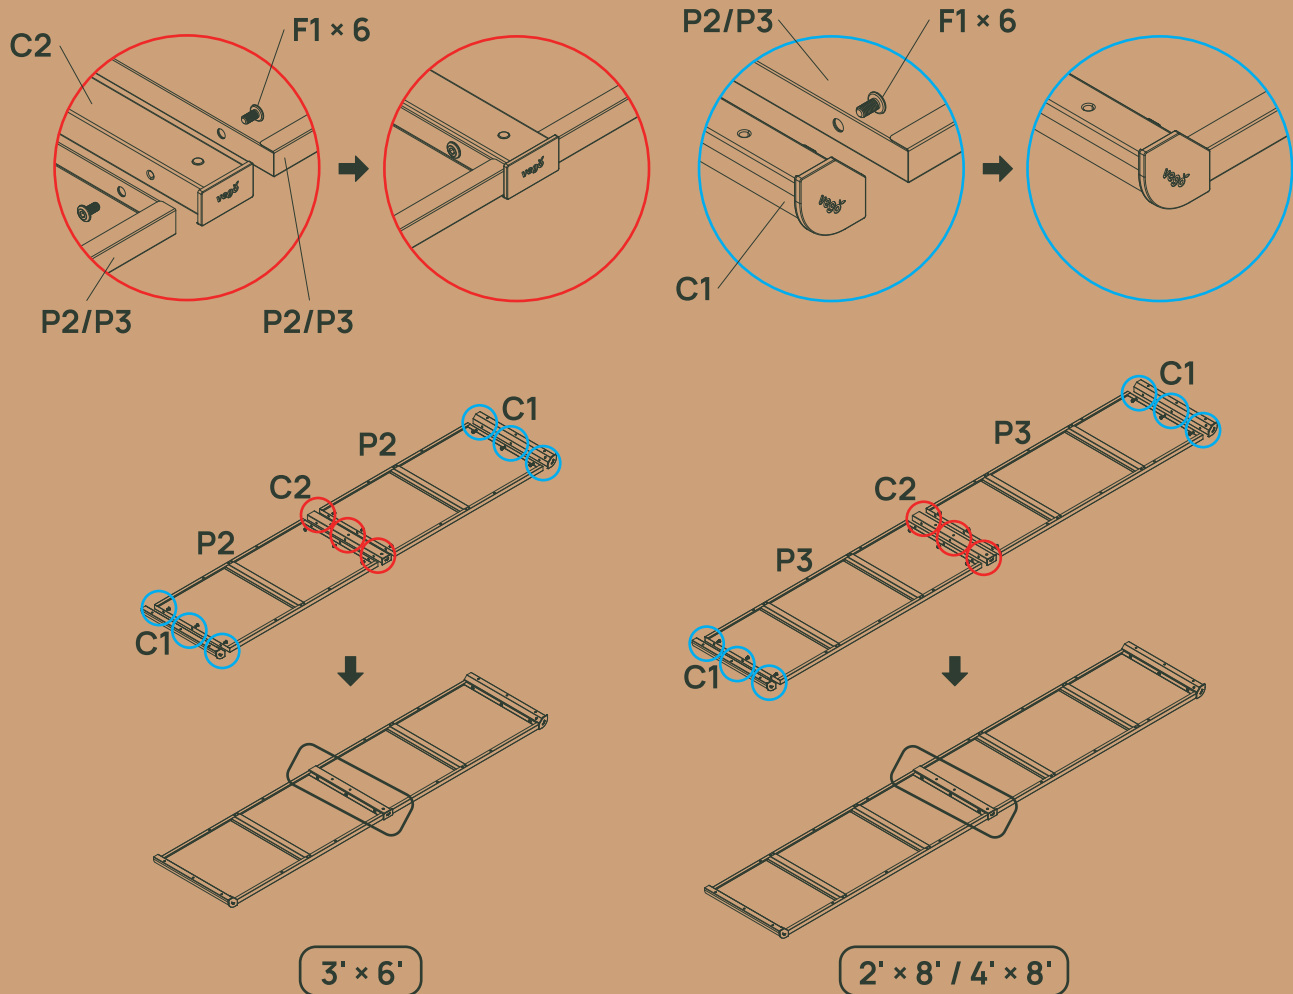

Note: Make sure the side of the C2 Center Posts with holes faces the inside of the garden bed.


For 2' x 8', 3' x 6', and 4' x 8' Models

These models include C2 Center Posts. Follow the steps below for assembly.

3 Attach the Short-Side Panel

Using F1 Bolts, attach the metal panel to the C1 Corner Post on the long side assembled in Step 2, as shown in the diagram.

Use P1 Metal Panels for the 2' x 8' model, P2 Metal Panels for the 3' x 6' model, and P3 Metal Panels for the 4' x 8' model.

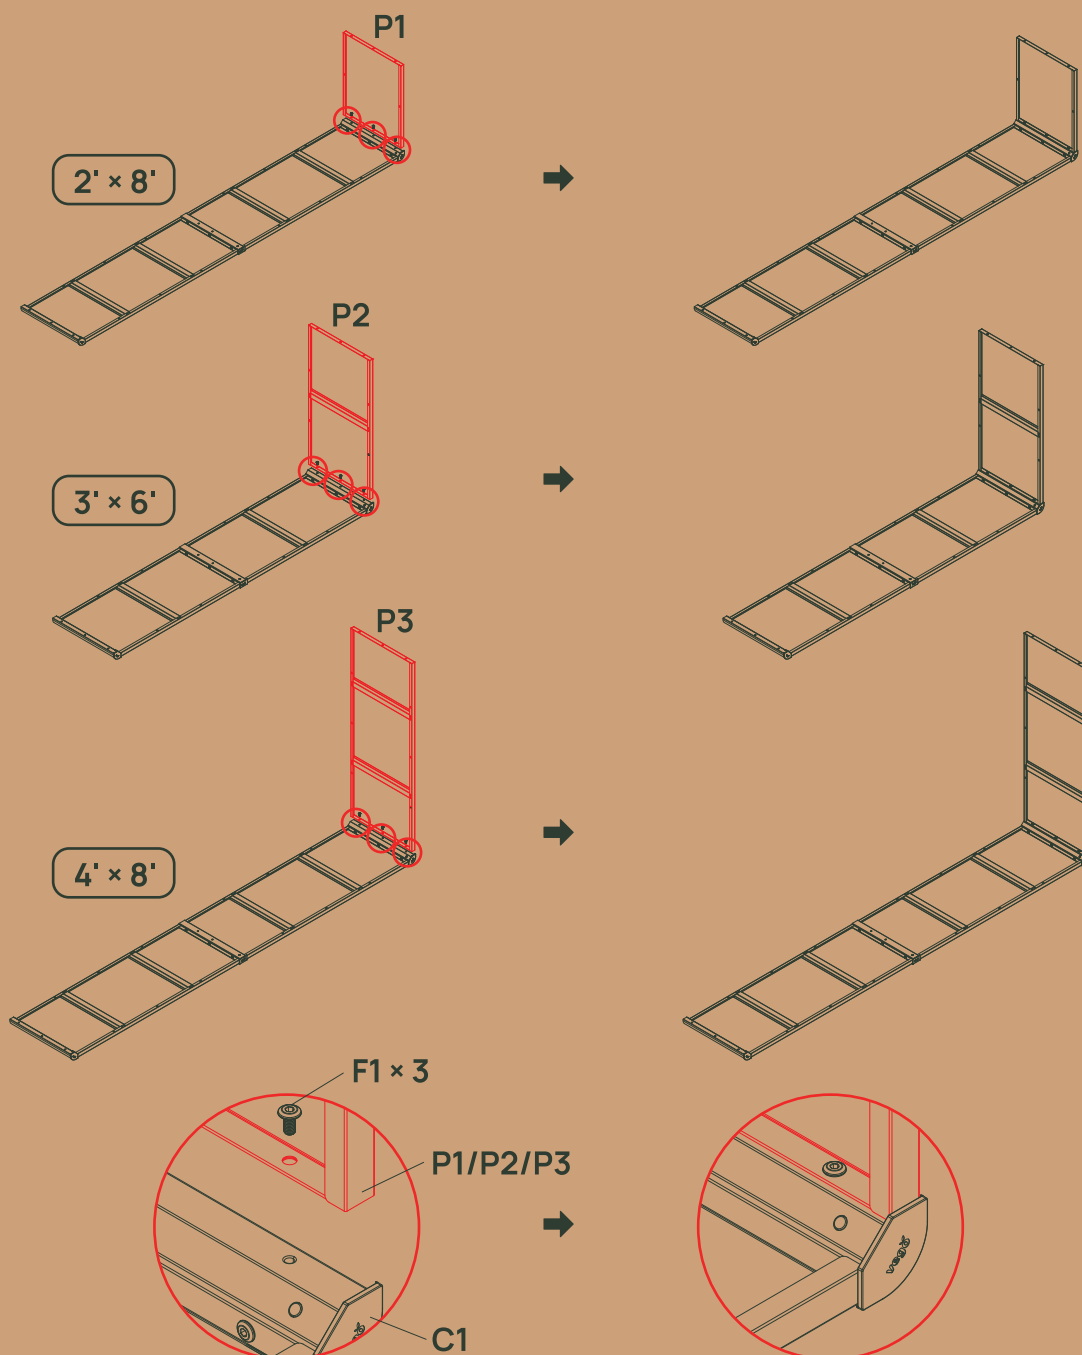


For 2' x 8', 3' x 6', and 4' x 8' Models


These models include C2 Center Posts. Follow the steps below for assembly.

- 4 Once connected, carefully turn the assembled section upright and place it on a flat, level surface. Repeat Steps 2-4 to assemble the other half.


Make sure the capped ends of the posts face up.

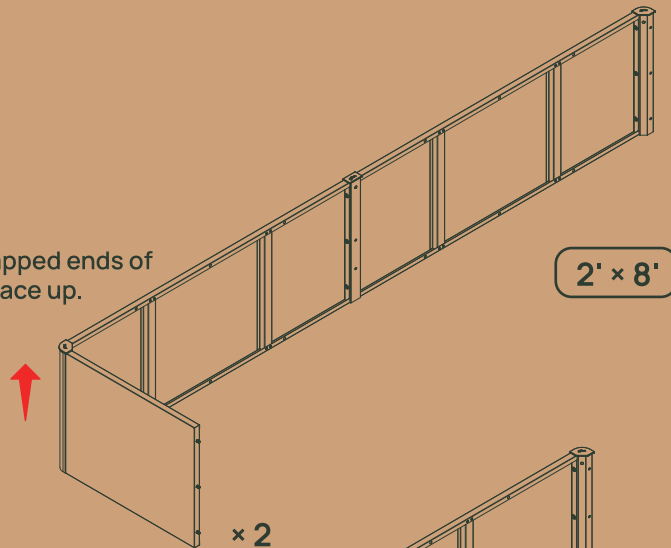

Make sure the capped ends of the posts face up.

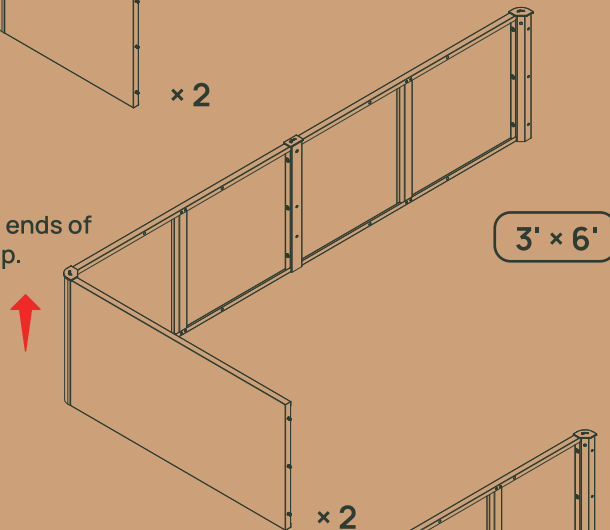

Make sure the capped ends of the posts face up.

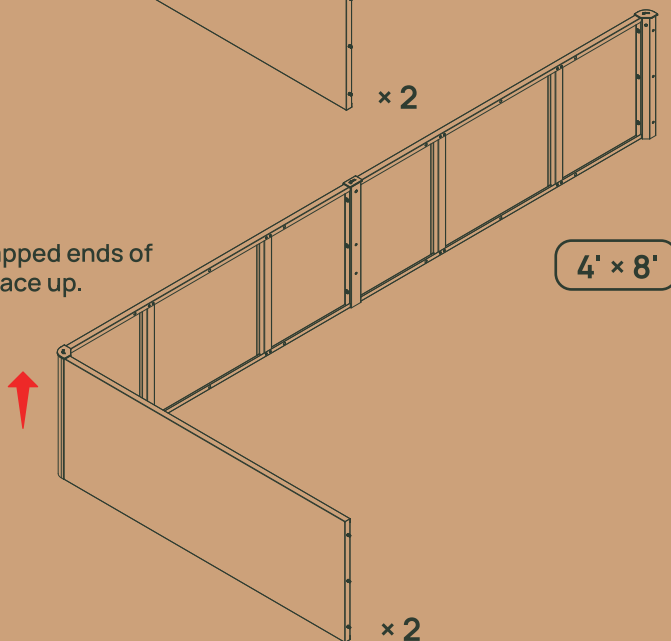



For 2' x 4' and 4' x 4' Models

These models do not require C2 Center Posts. Follow the steps below for assembly.

2 Assemble One Side

Using F1 Bolts, attach two C1 Corner Posts to one P3 Metal Panel as shown in the diagram to assemble the first side.

Note: Make sure the capped ends of all C1 Posts face the same direction.

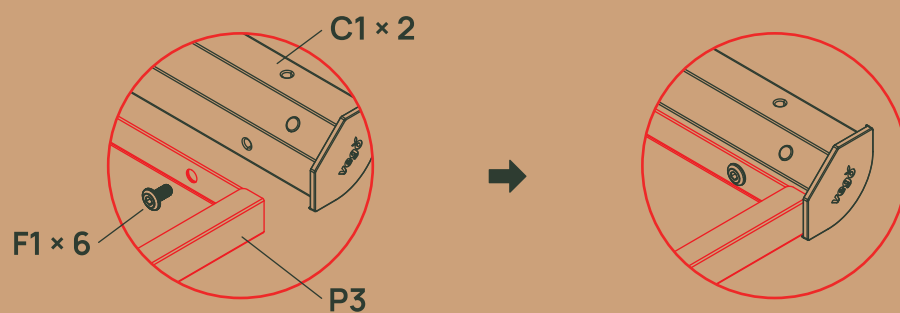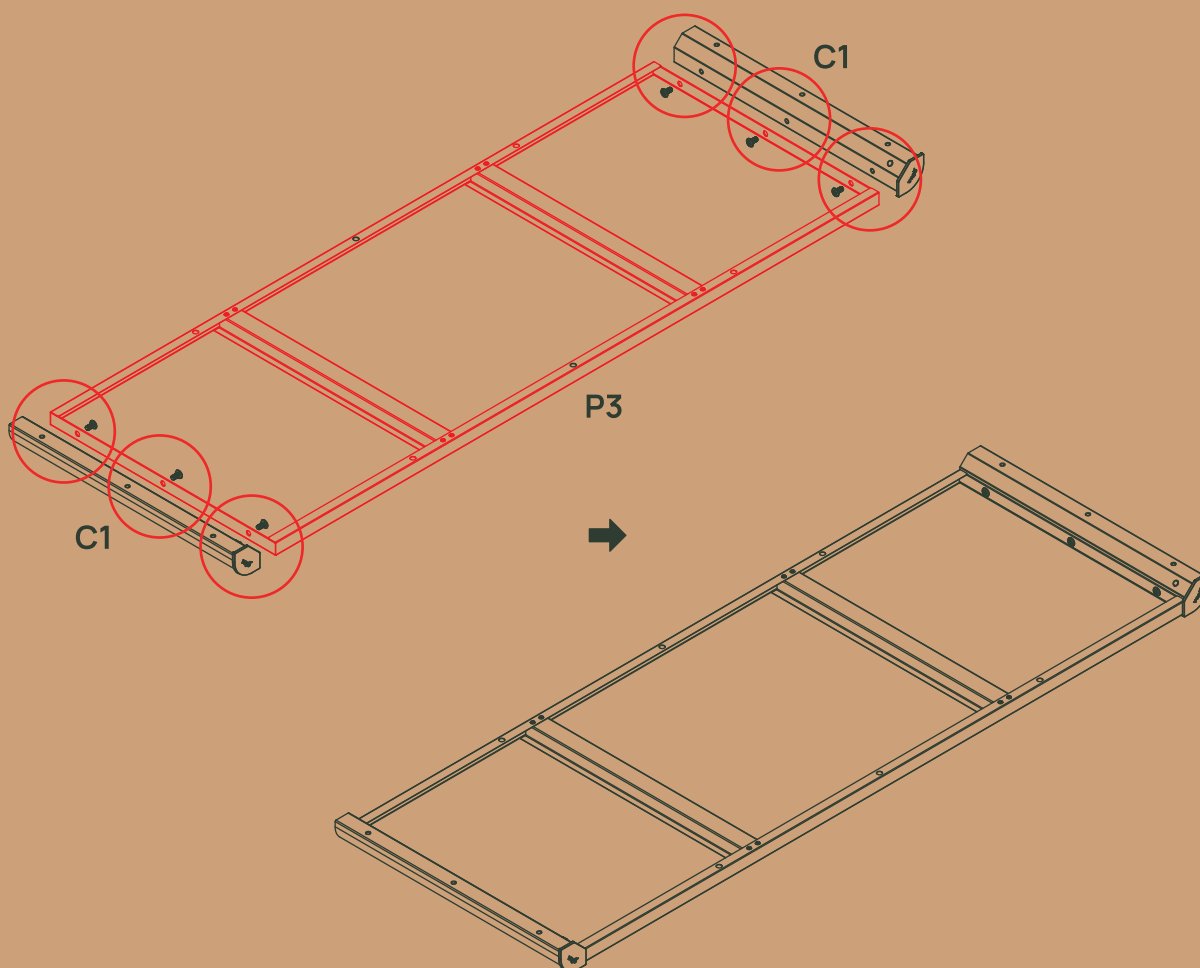


For 2' x 4' and 4' x 4' Models

These models do not require C2 Center Posts. Follow the steps below for assembly.

3 Assemble the Adjacent Side


Using F1 Bolts, attach the metal panel to the C1 Corner Posts as shown in the diagram.

Use P1 Metal Panel for the 2' x 4' model and P3 Metal Panel for the 4' x 4' model.

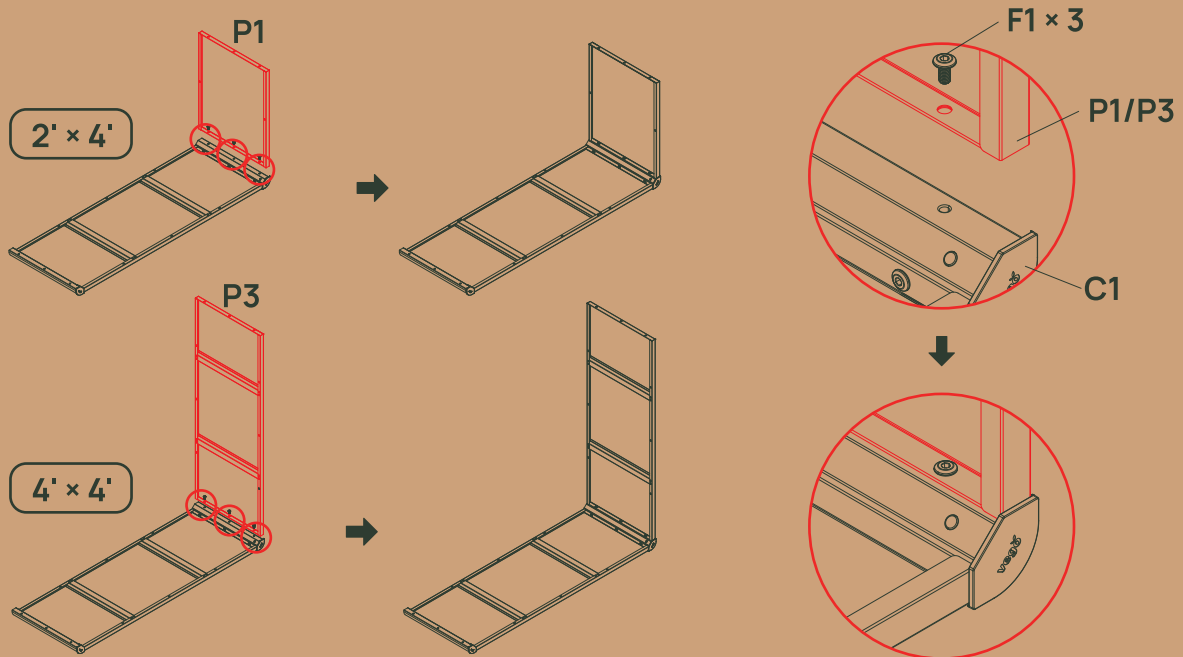









4 Once connected, carefully turn the assembled section upright and place it on a flat, level surface. Repeat Steps 2–4 to assemble the other half.

Note: Make sure the capped ends of the posts face up.

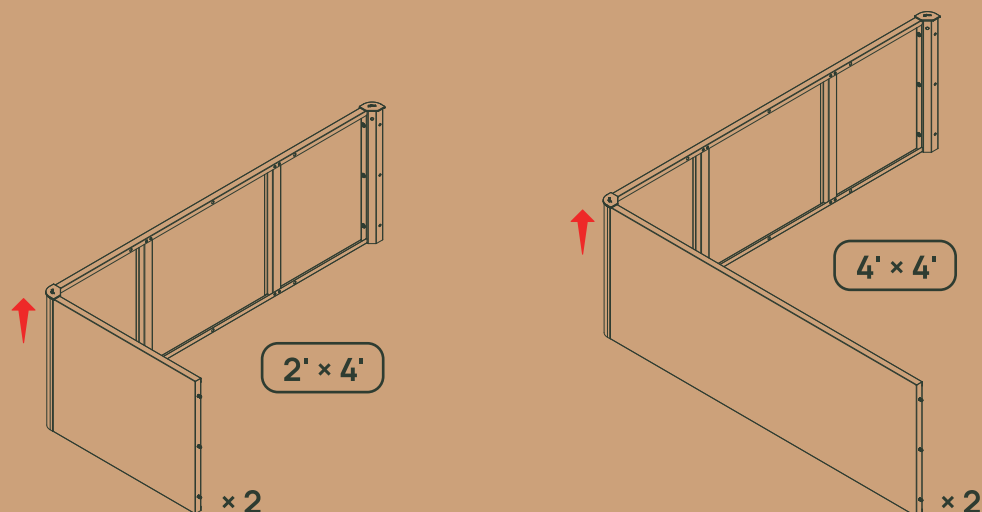

5 Connect the Two Halves



After completing Steps 2–4 for your model, use F1 Bolts to connect the two halves of the garden bed.

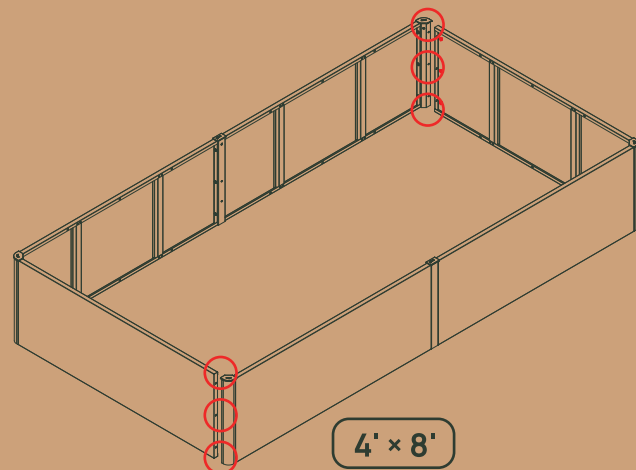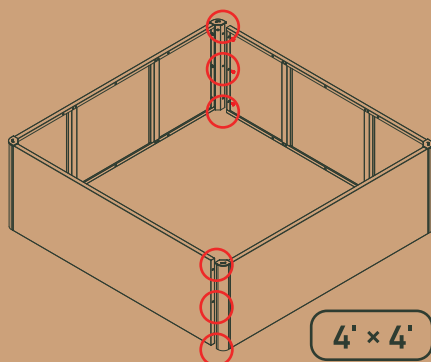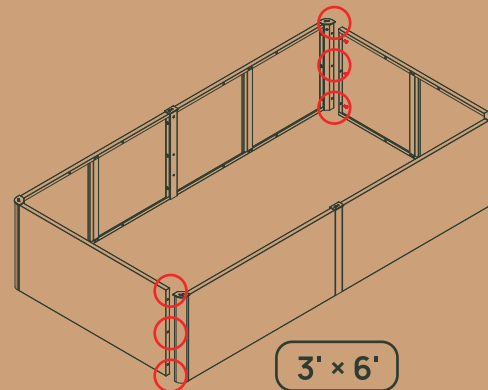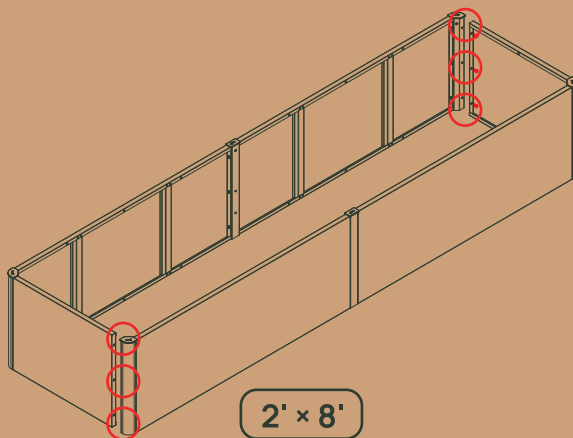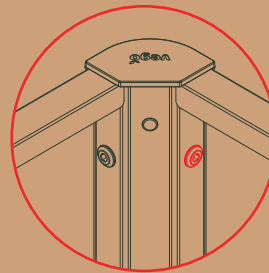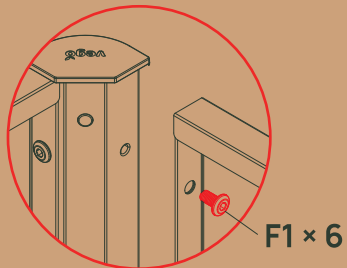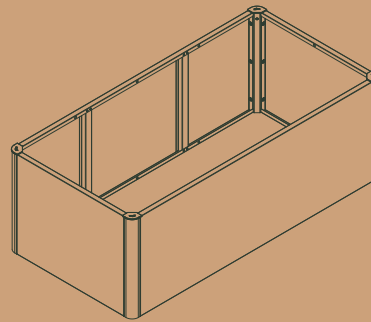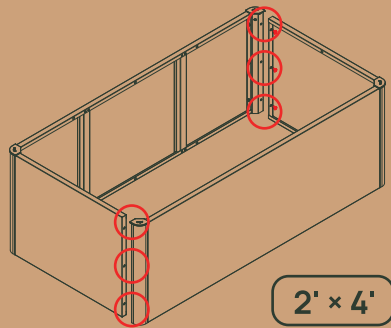

6 Install the Bracing Frame


The 2.0' × 4.0' and 4.0' × 4.0' sizes do not require bracing frame.

For 2.0' × 8.0', secure the L3 Bracing Frame between the two C2 Center Posts using F2 bolts.

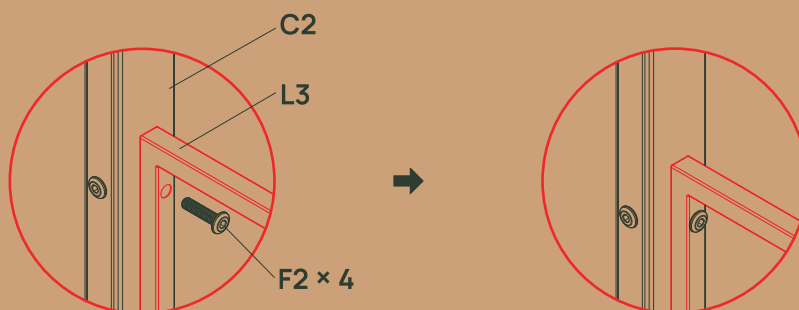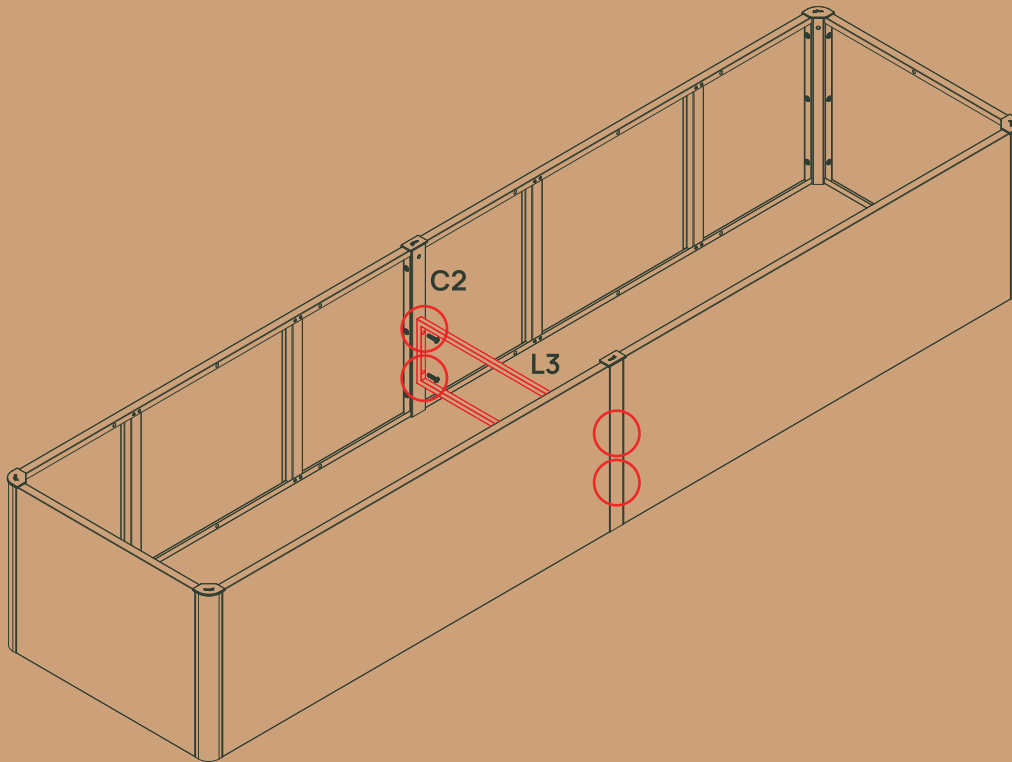


For the 4' × 8' model, assemble the three L1 Bracing Frames into one complete bracing frame using F3 Bolts and F4 Nuts. Tighten them using the T1 and T2 Wrenches.

Secure the assembled frame between the two C2 Center Posts using F2 Bolts.


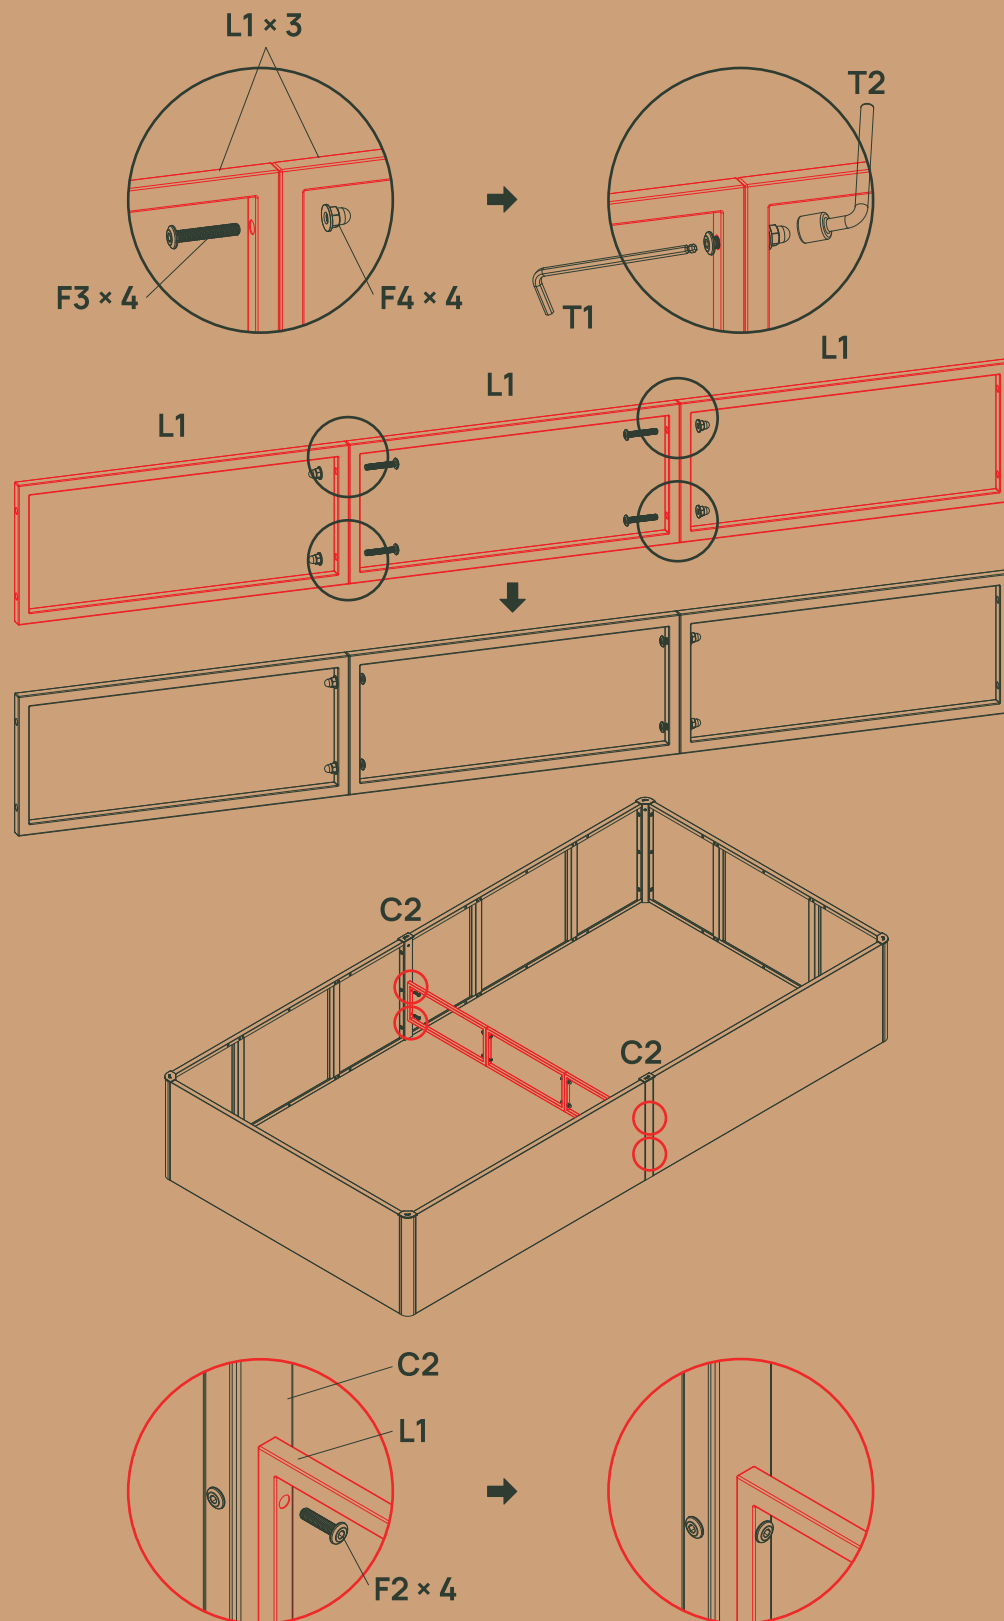


For the 3' × 6' model, assemble the two L2 Bracing Frames into one complete bracing frame using F3 Bolts and F4 Nuts. Tighten them using the T1 and T2 Wrenches.

Secure the assembled frame between the two C2 Center Posts using F2 Bolts.

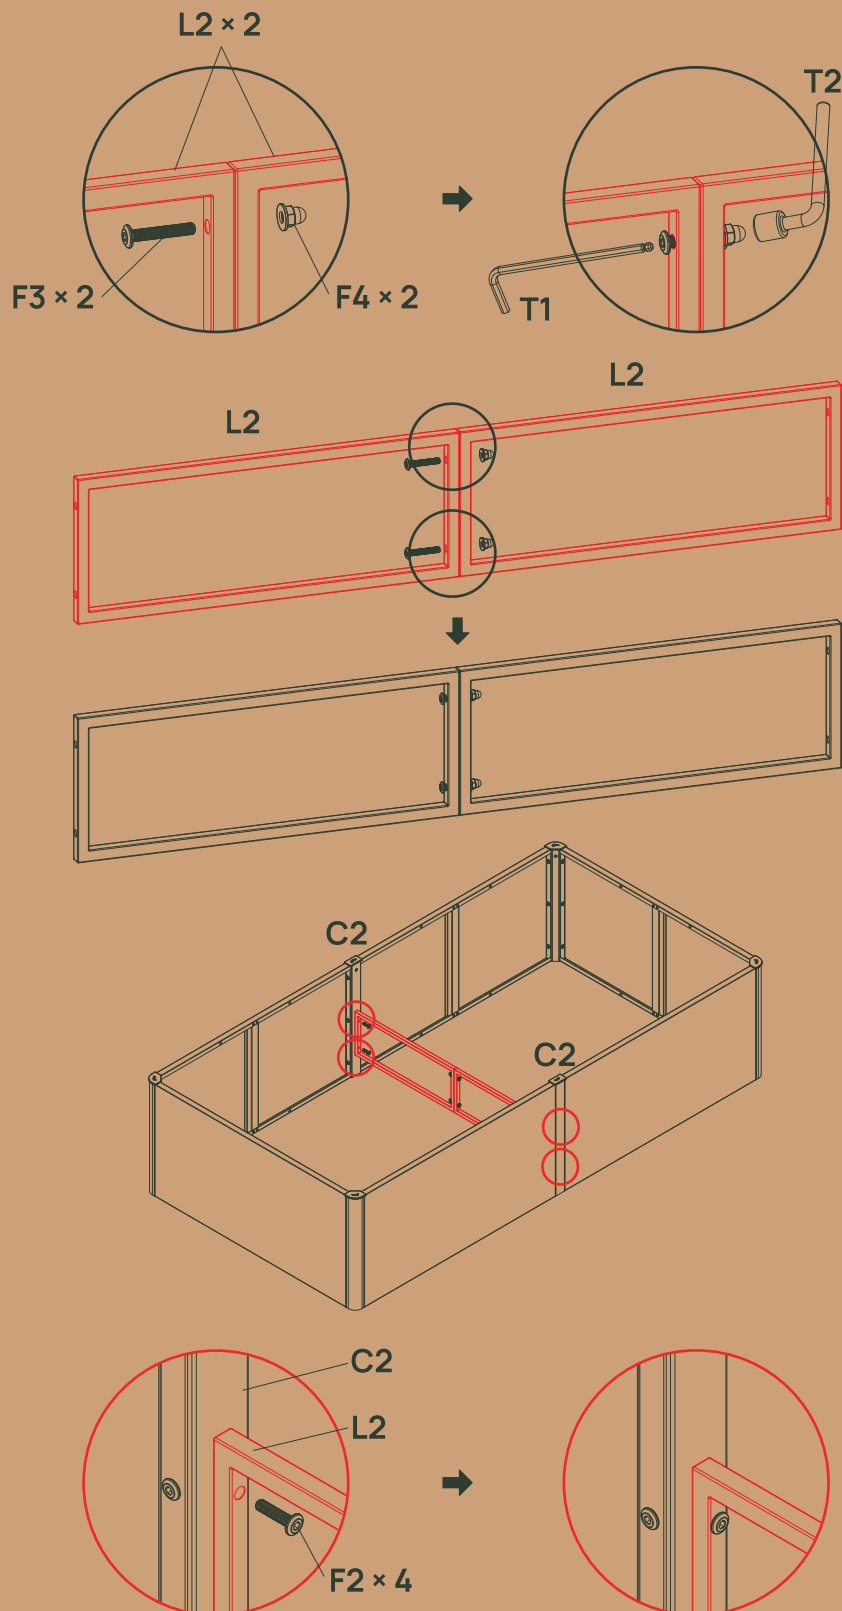

- 7** Remove the protective film from both sides of the aluminum nameplate, then attach it to the outside of the garden bed.

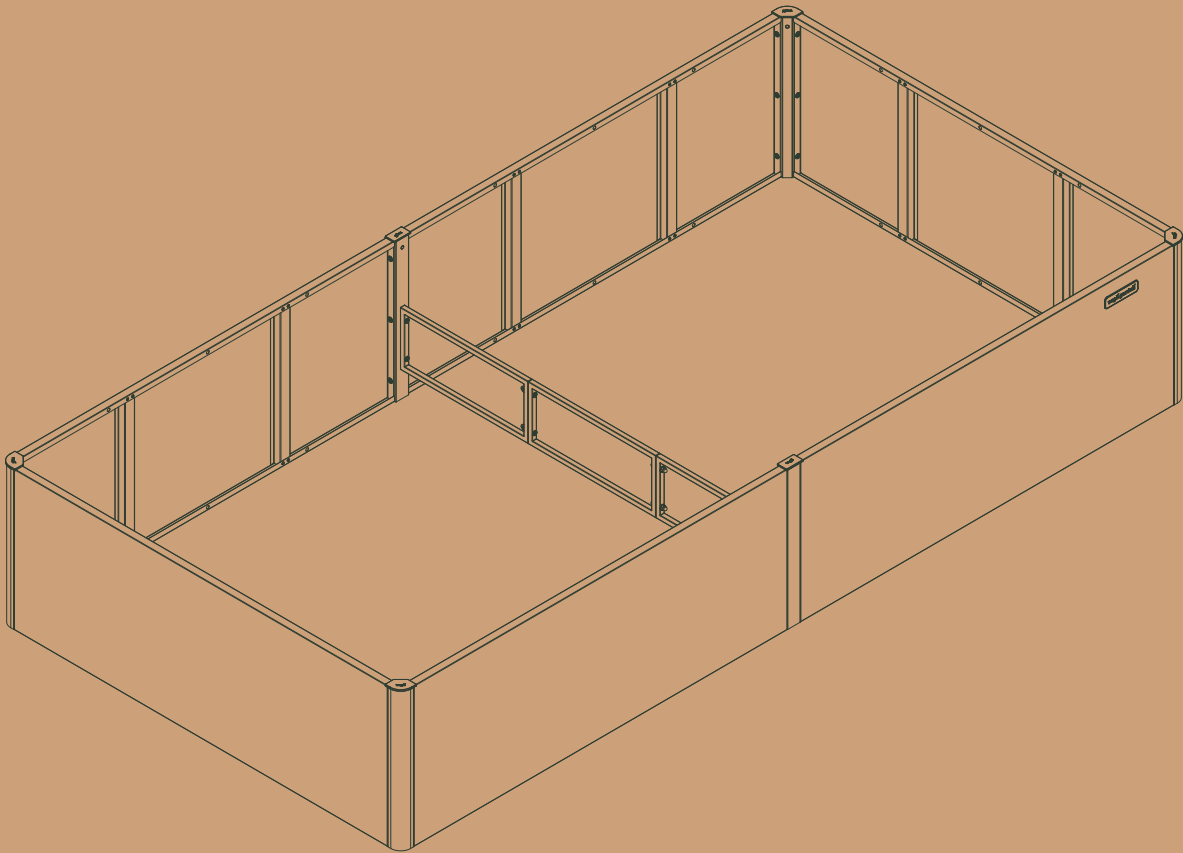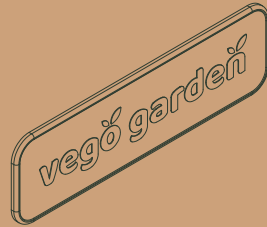

Contact Us



+1 (866) 597-1888



Vego Garden Academy



hello@vegogarden.com



vegogarden.com



vego_garden



Houston, TX