


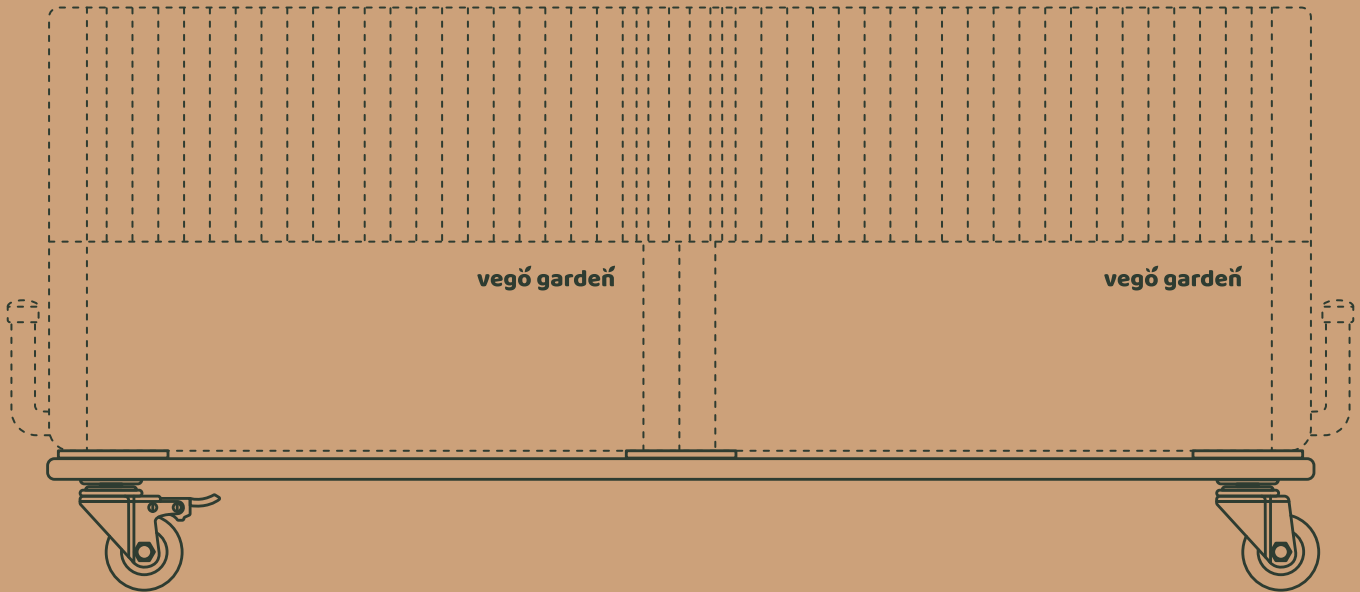

# User Manual for EZCube Standard Rolling Conversion Kit


Gardening Made Easier. Anytime, Anywhere.

Copyright © 2026 Vego





## Parts List

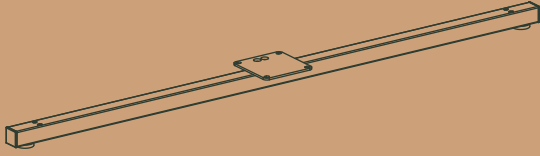

**P1**

Qty: 2



**P2**

Qty: 2




**P3**

Qty: 1




**F1**

Qty: 2

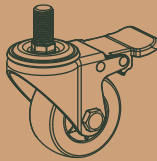


**F2**

Qty: 2

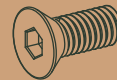

**F3 M6x14**

Qty: 12

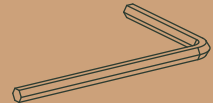

**T1**  
L-Shaped Hex Key  
Qty: 1



## Safety Precautions

This product may contain sharp metal corners and edges. To prevent injury:

- Handle with care at all times
- Wear gloves, closed-toe shoes & long pants when handling
- Work on a stable, clean surface away from children and pets
- Follow all instructions carefully and use tools only as directed



If you are unsure about any step, pause and seek assistance.





## Assembly Tips

- Additional tools are needed to complete this assembly, see below:

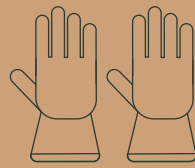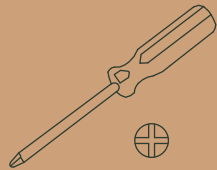

(Optional)


- Assembly takes approximately half an hour.
- During assembly, we recommend placing the unpacked box flat on the ground to serve as a protective mat.



## Assembly Guide


**Note:** If this kit was purchased together with a new EZCube planter, skip Steps 1–3 and proceed directly to Step 4.

- 1 Start with a fully assembled EZCube. Remove the water gauge and airflow assemblies before installing the Standard Rolling Conversion Kit.

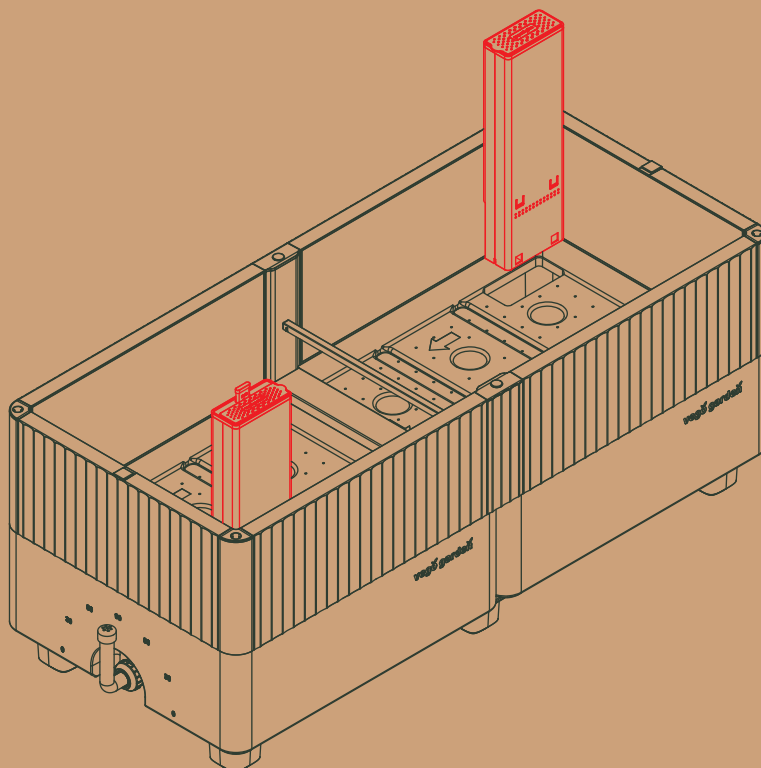



Visit [vegogarden.com](http://vegogarden.com) for more info.

- 2 Lift the entire inner bucket assembly out (be sure to lift by the flat side panels.)

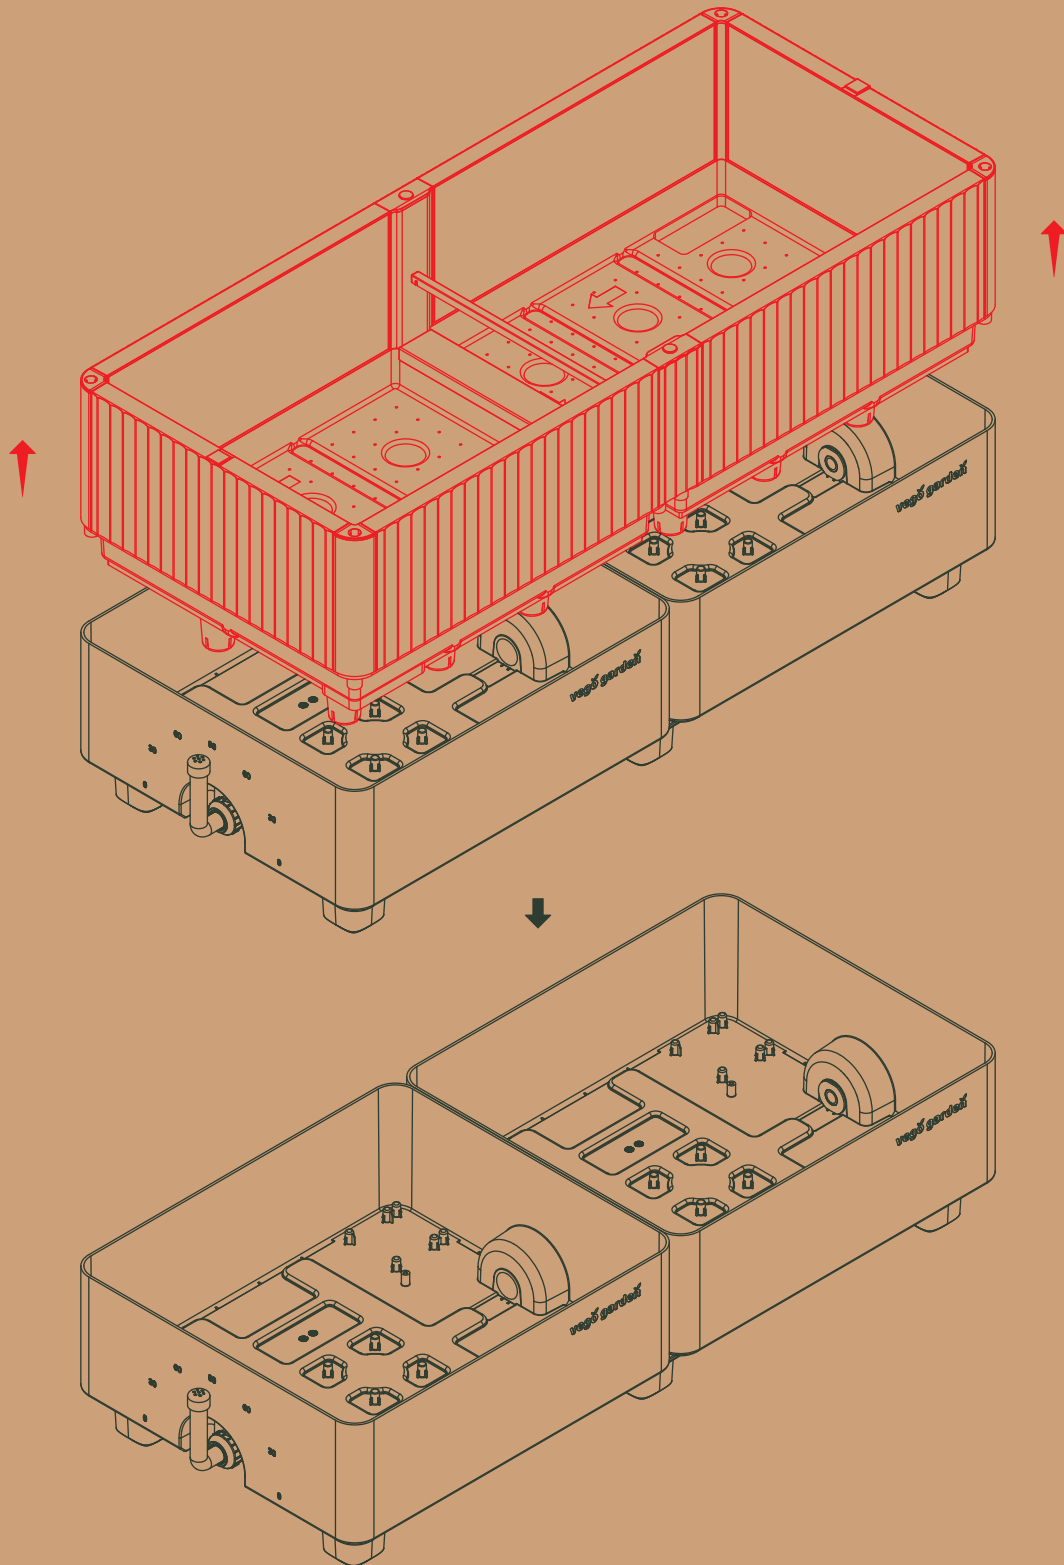




- 3** Turn the reservoir upside down and place it on a mat or cardboard to prevent scratches. Remove all six P3 feet and retain the screws for later installation of the Standard Rolling Conversion Kit.

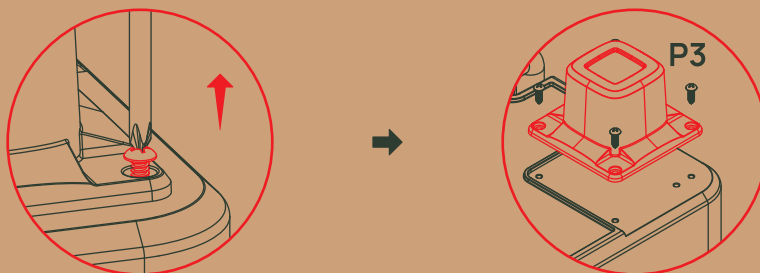
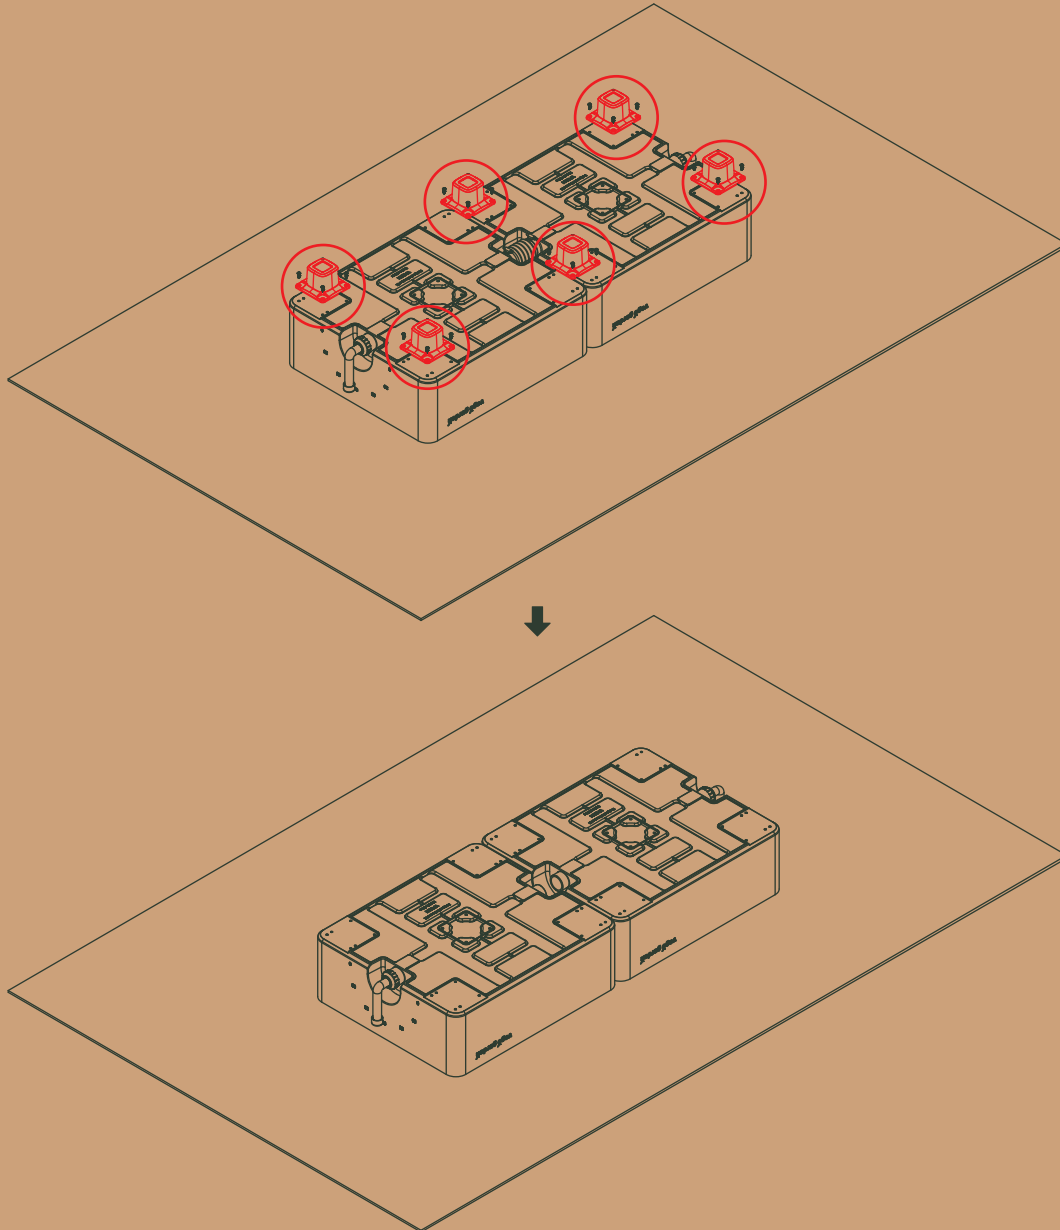


- 4** Assemble the cart frame by connecting the side rails (P1) and end brackets (P2) using F3 screws.

Position each P1 bracket so the screw holes face inward toward the center of the frame.

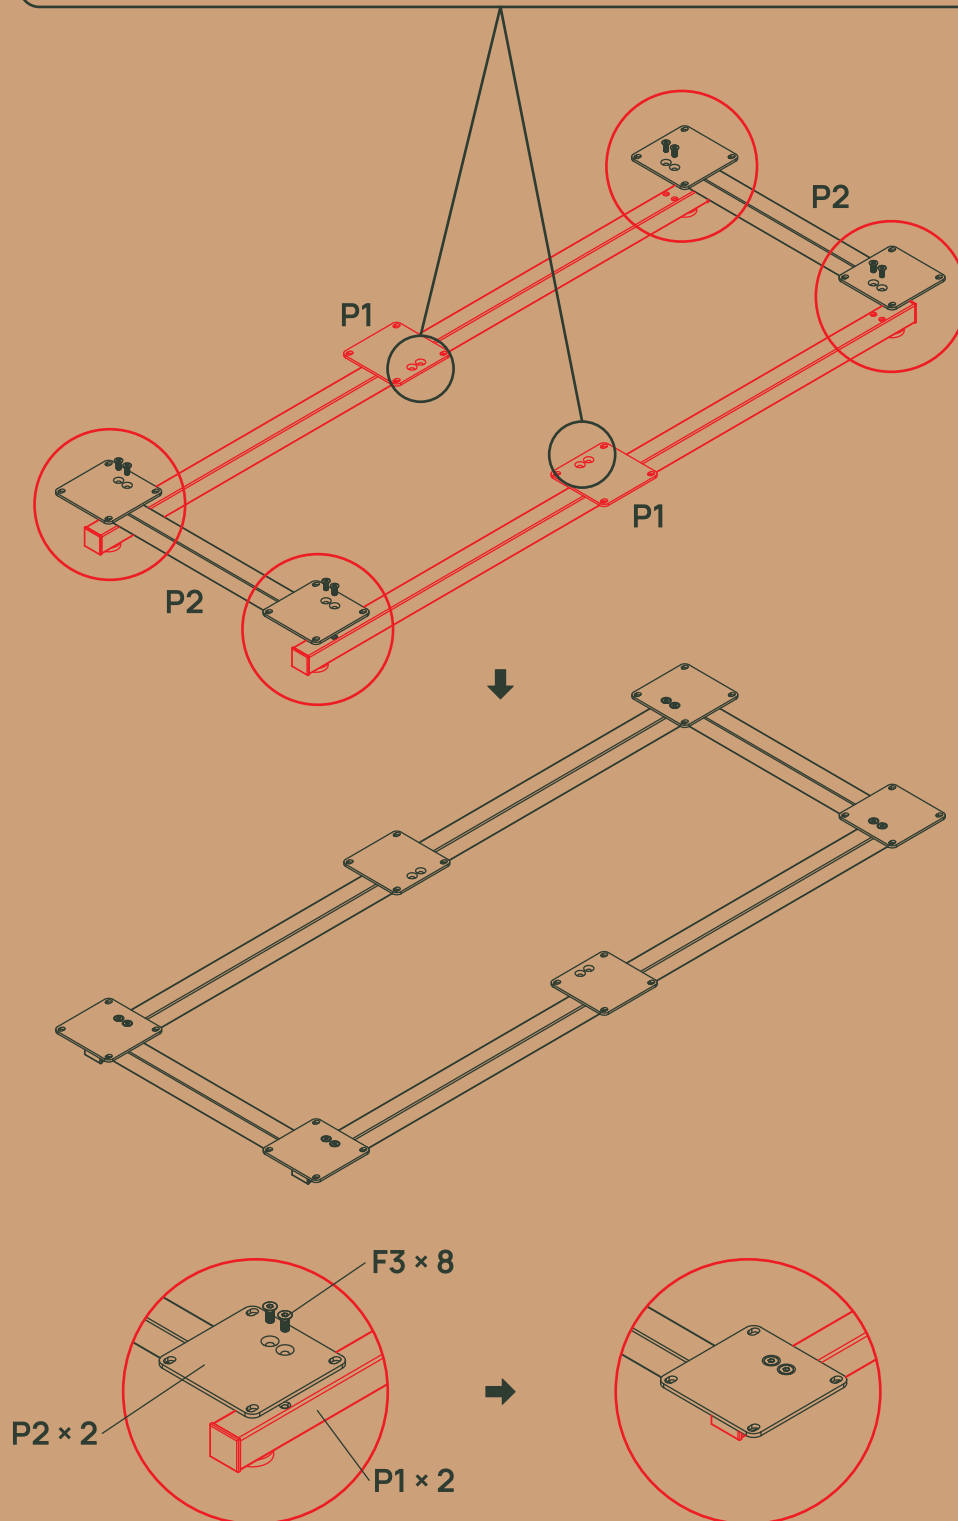


- 5** Attach the P3 center bracket to the P1 rails using four F3 screws.

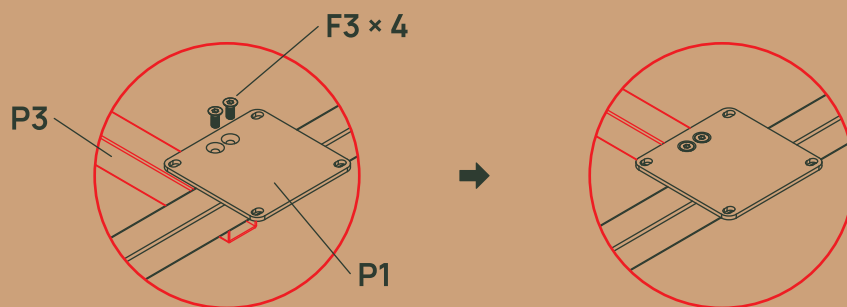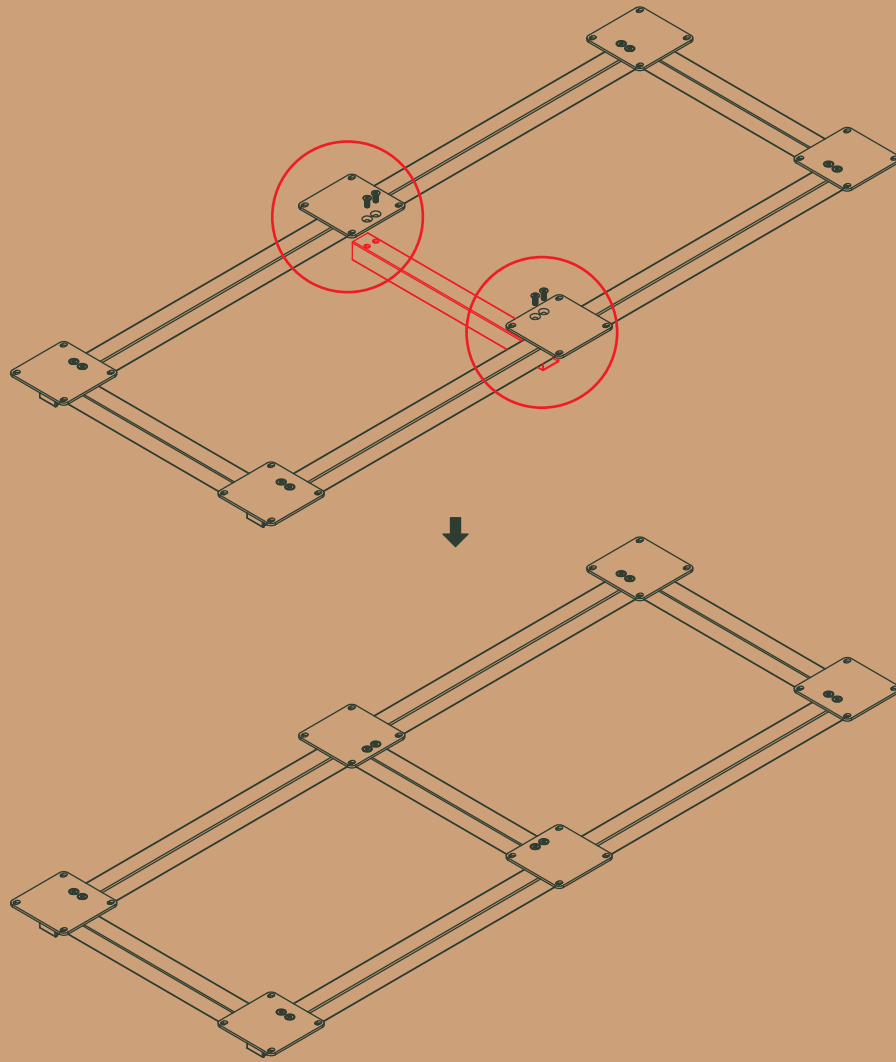


- 6** Attach the assembled cart frame to the bottom of the EZCube using the twenty four screws removed in Step 3.


**Tip:** Align all mounting holes and start all screws before fully tightening them. The cart frame should sit flush against the bottom of the EZCube when properly installed.

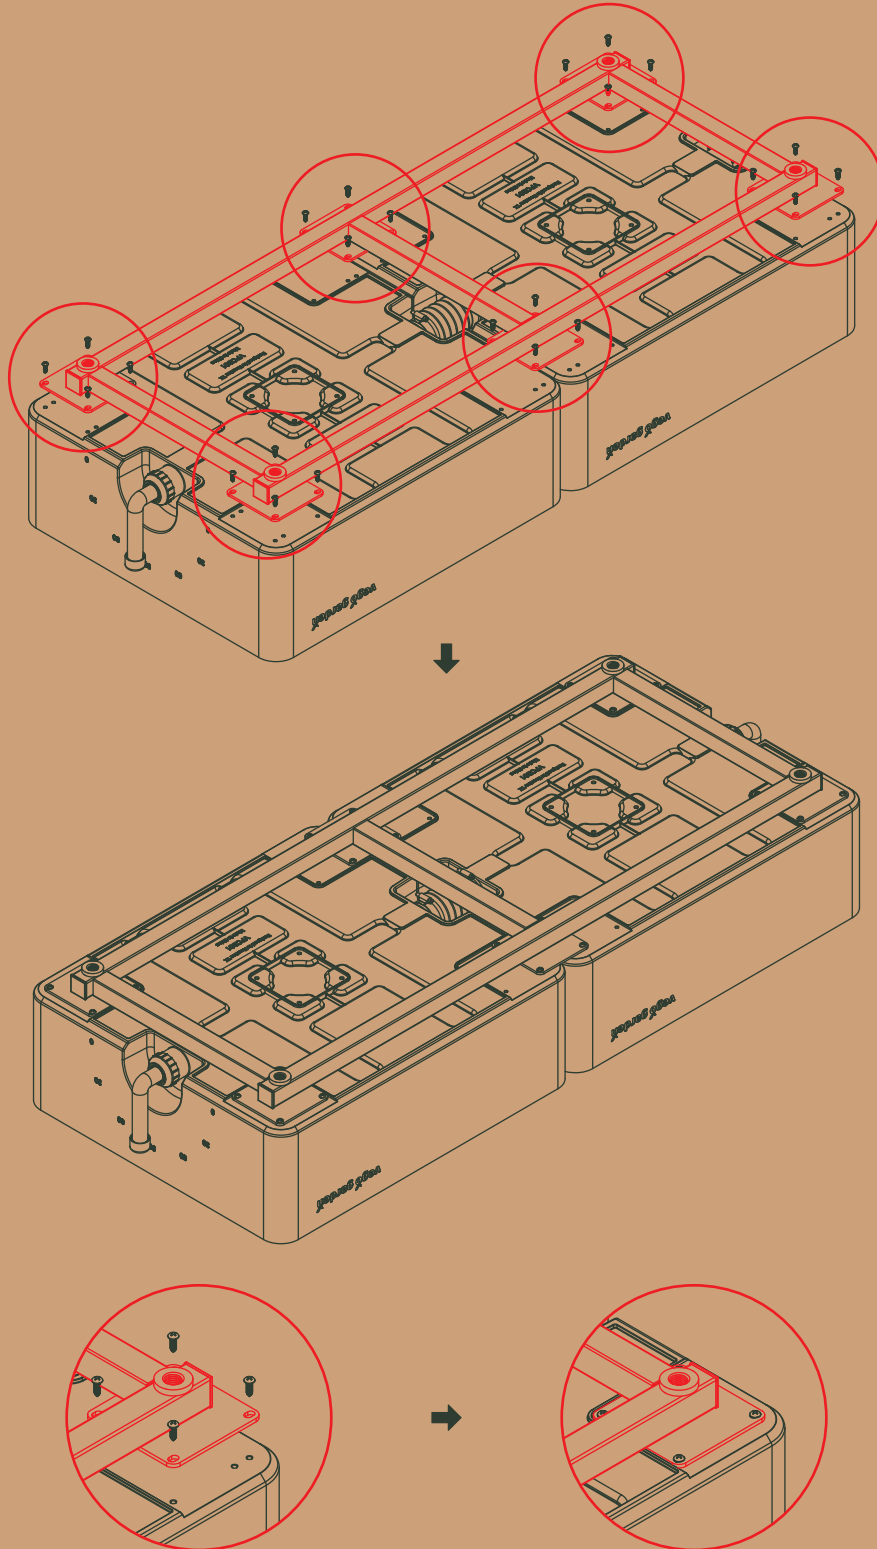


- 7** Install F1/F2 onto the trolley frame, making sure the locking casters are installed diagonally.

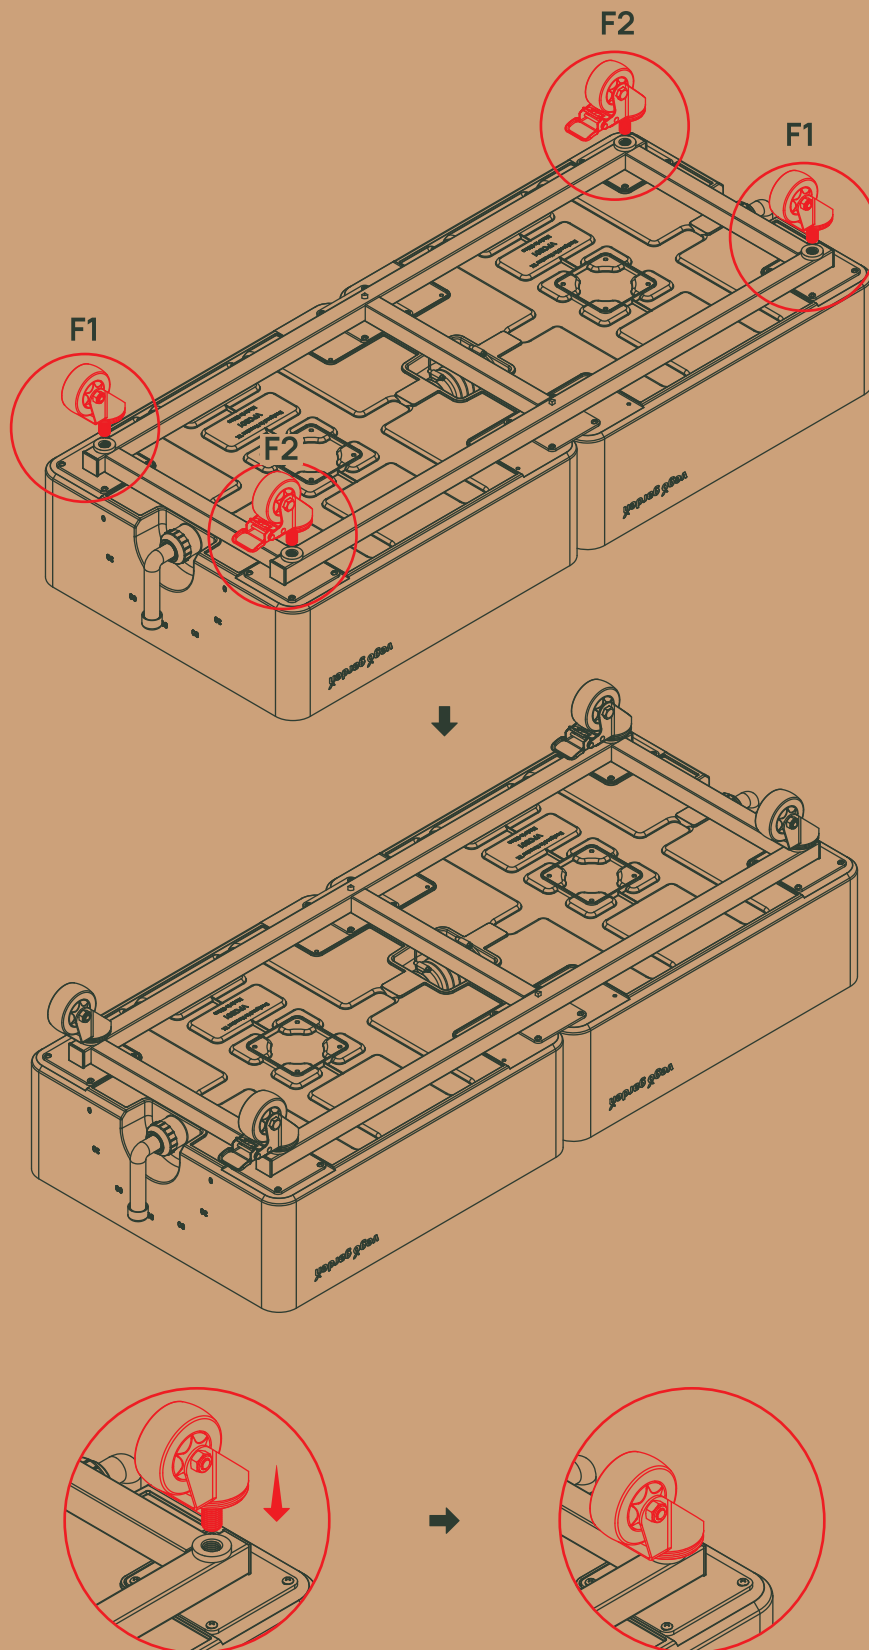

- 8 Carefully turn the EZCube upright and reinstall the inner bucket assembly.

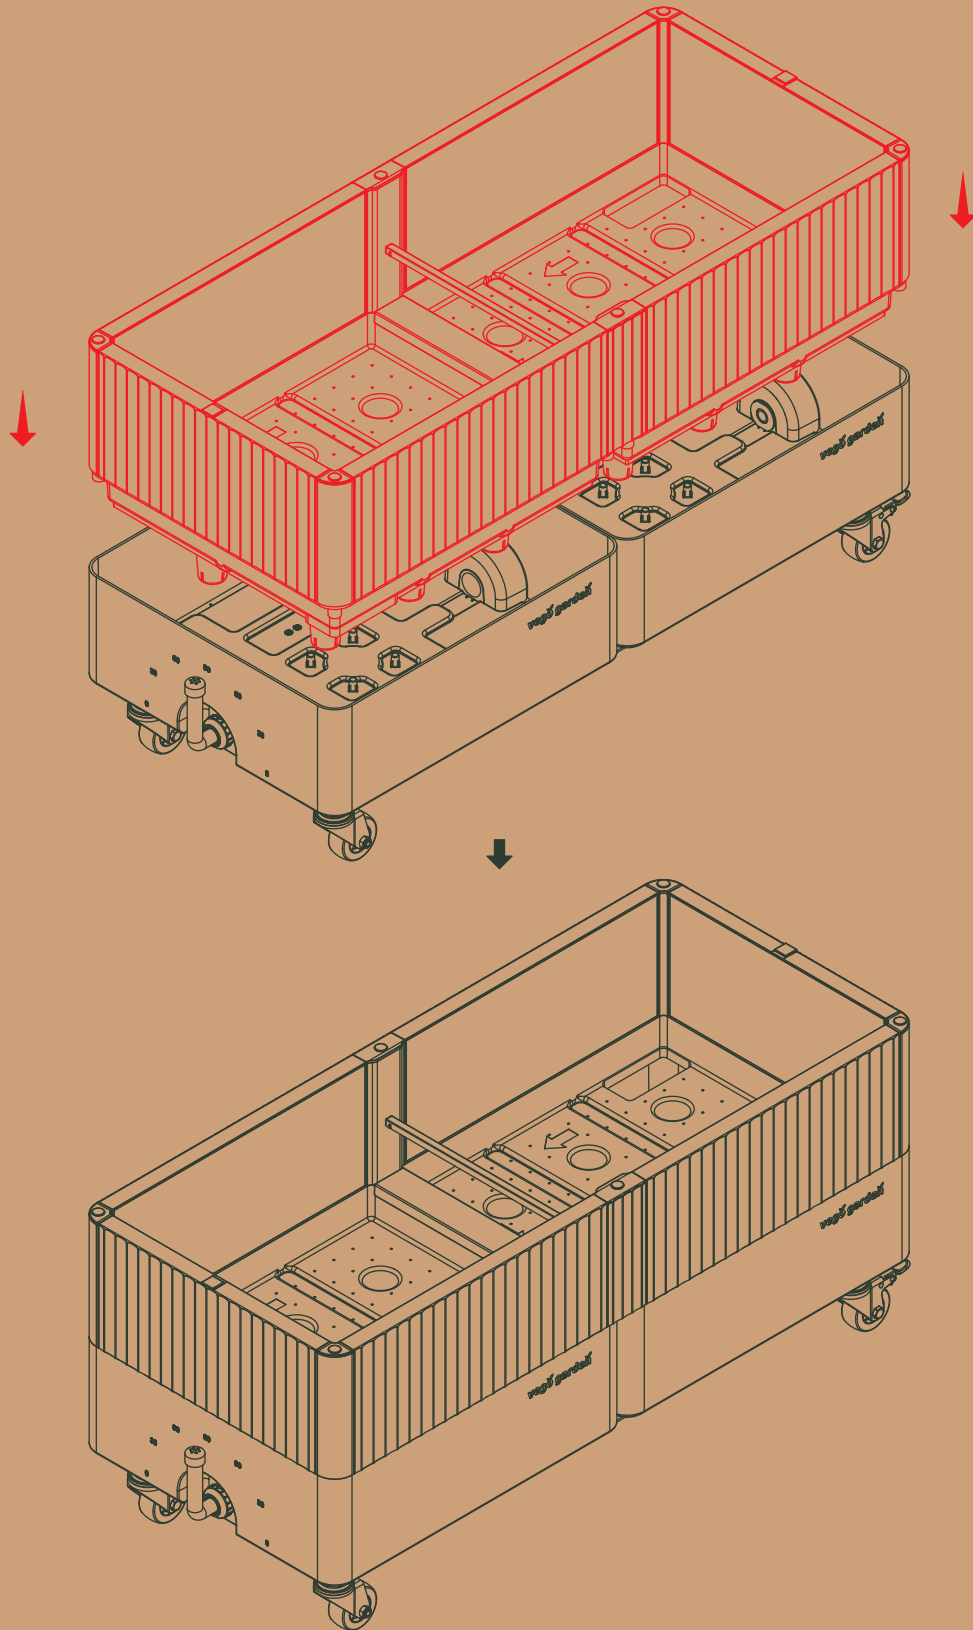

- 9** Reinstall the water gauge and airflow assemblies removed in Step 1.

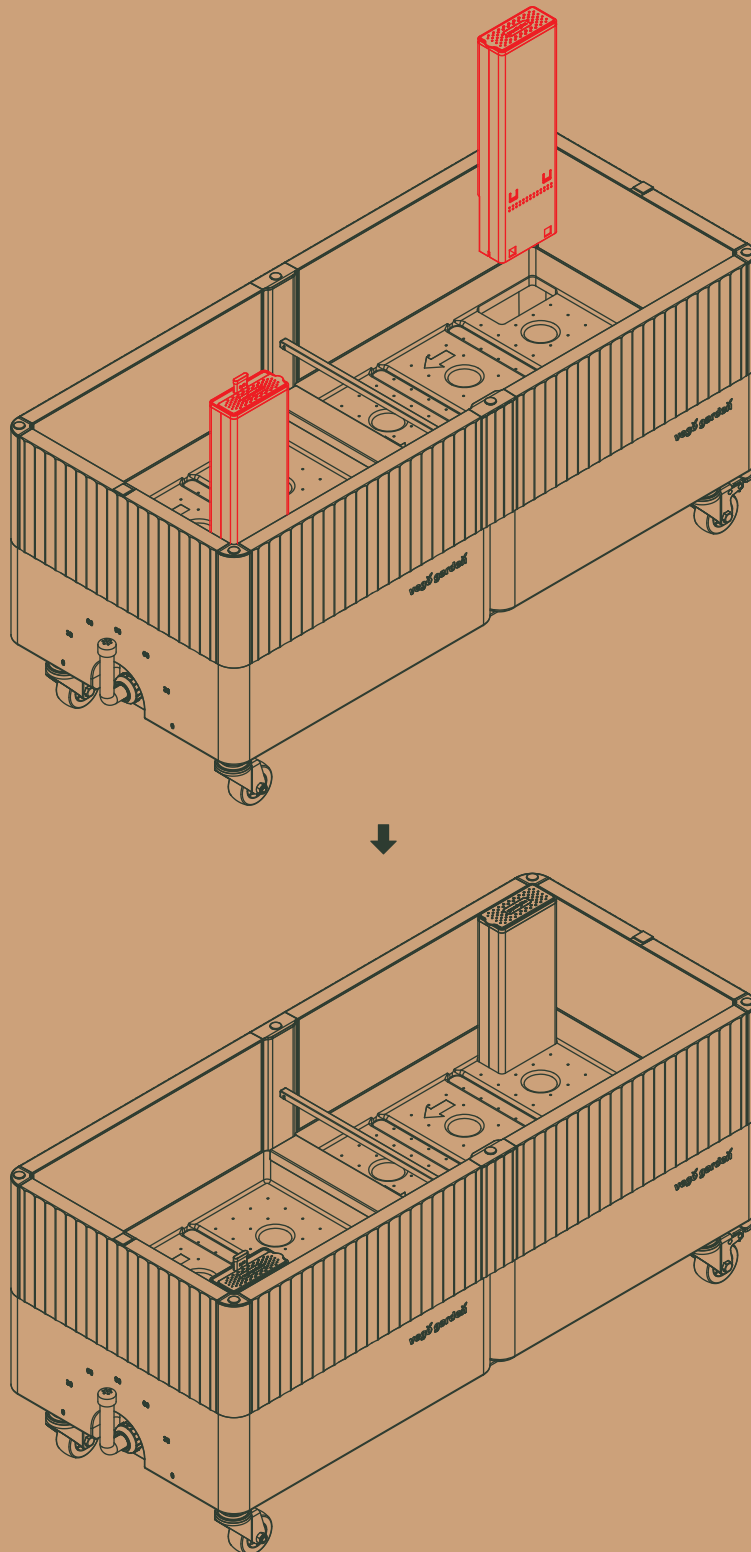

VEGOGARDEN.COM



Gardening  
Made Easier.  
Anytime,  
Anywhere.

---



## Contact Us



+1 (866) 597-1888



Vego Garden Academy



hello@vegogarden.com



vegogarden.com



vego\_garden



Houston, TX